

RUBBER FLOORING INSTALLATION INSTRUCTIONS


1. Measure the exact distance from wall to wall and snap a chalk line which divides the room into two equal sections.

2. The first row of blocks are to be installed dead center on the chalk line perfectly straight. Failure to interlock all rows exactly parallel to previously installed rows will cause disengagement of the blocks.

3. These blocks require the sub-floor on which they are to be installed to be horizontally level. If the sub-flooring is not level and smooth, use of a rubber latex cement is recommended.

All blocks which are shaded are cut from center blocks with linoleum knife to fit against wall. (be sure to leave approx. 1/4" to 1/2" gap between the wall and the surface).

Example

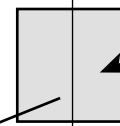

Use this other piece to make another border block.

To make this boarder block.

Make cut here approx. 1/4" to 1/2" from the wall.

Measure the exact distance from wall to wall and draw a line dead center then lay this row first.